



Sil3124 SATARAID5™
Quick Installation Guide
(Macintosh Version)

Document Number: DOC-003124-214

Version 1.0

Copyright © 2005, Silicon Image, Inc.

All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, or translated into any language or computer format, in any form or by any means without prior written permission of:

Silicon Image, Inc.
1060 East Arques Ave.
Sunnyvale CA 94085

Silicon Image, the Silicon Image logo and SATARAID5 are the trademarks or registered trademarks of Silicon Image, Inc. ("Silicon Image") in the United States and other countries. The information contained in this document is provided by Silicon Image merely as a courtesy and is, to the knowledge of Silicon Image, accurate. However, Silicon Image is under no obligation to update and/or keep current the information contained in the document. Silicon Image disclaims any and all liability resulting from the use of the information contained in this document and any reliance on such information shall be at the sole risk of the relying party. Silicon Image expressly reserves the right to change the information contained herein without notice.

Apple, Mac and MacOS are trademarks of Apple Computer, Inc., registered in the United States and other countries.

Sun, Sun Microsystems and JAVA are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

Sil3124 SATARAID5 Installation


Overview

This document guides you through the installation procedure of the **Sil3124 SATARAID5** software for MacOS 10.3.


External Physical Connections

Before installing the SATARAID5 software, you should install the Sil3124 RAID controller hardware into your computer system. Refer to the installation instructions for the Sil3124 controller.

You can connect a SATA hard disk to each of the SATA ports on the Sil3124 RAID controller, as shown in the illustration below. You can also use one of the SATA ports to connect an external storage enclosure that has Port Multiplier capabilities, such as the SV2000 Storage Appliance. In that case, be sure to disable any hard drive virtualization by setting the external enclosure into JBOD mode. Refer to the documentation for your external storage enclosure for instructions about how to set it into JBOD mode. Also ensure that the latest available version of firmware for the storage enclosure is installed.

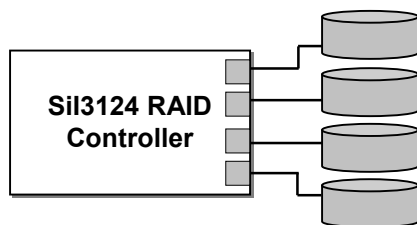

SATA Hard Disks connected to each port of a RAID controller

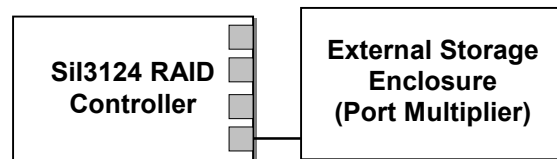

External Storage Enclosure connected to one port of a RAID controller

Install Using the Macintosh Installer


Use the following procedure to install the Sil3124 SATARAID5 software onto your computer system.

Note: You must have Administrator privileges on your system to install the software.

1. Insert the Sil3124 SATARAID5 installation CD into your CD-ROM drive or download the installation package from Silicon Image's website.
2. Open the installation CD and select the Mac folder.
3. Copy the **SATARaid5.tz** file to your desktop or another local folder.
4. Double-click the **SATARaid5.tz** file to expand it into a folder named **SATARaid5**.
5. Change to the **SATARaid5** folder.
6. Double-click the **SATARaid5.mpkg** file to begin the installation. The following dialog appears:




7. Click **Continue** to dismiss the Introduction screen. The following dialog appears:

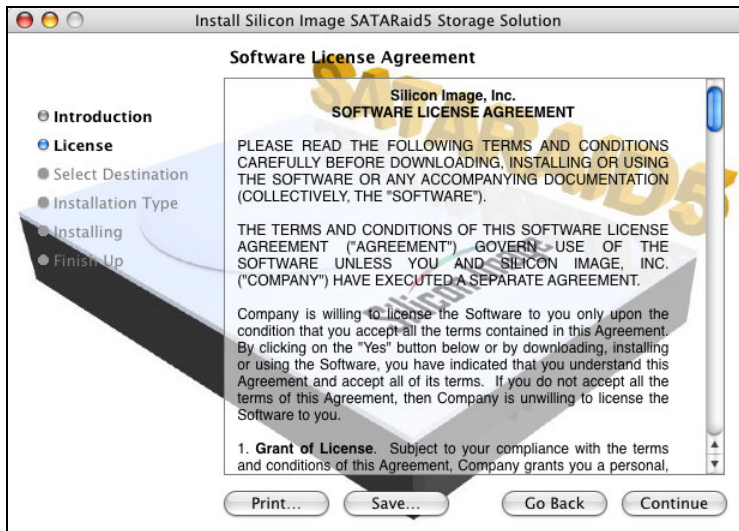


8. Read the software license agreement and click **Continue**. The following confirmation dialog appears:




9. Click **Agree** to accept the license agreement terms and continue. The following dialog appears:

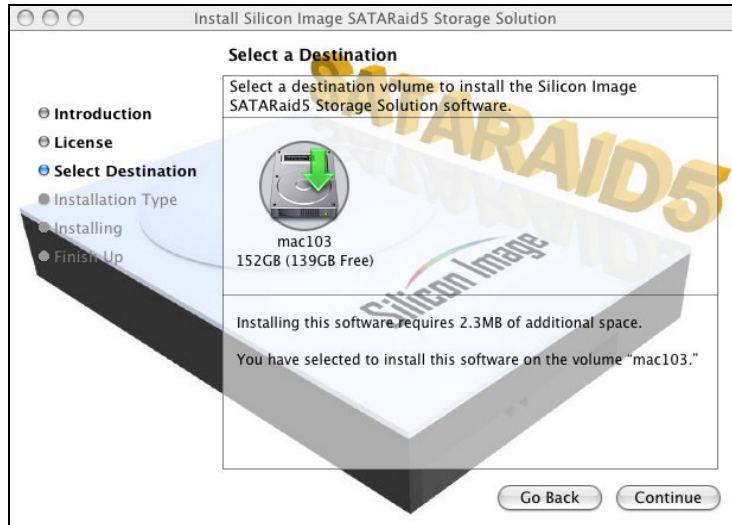

10. Select the local hard disk drive and click **Continue**. The following dialog appears:

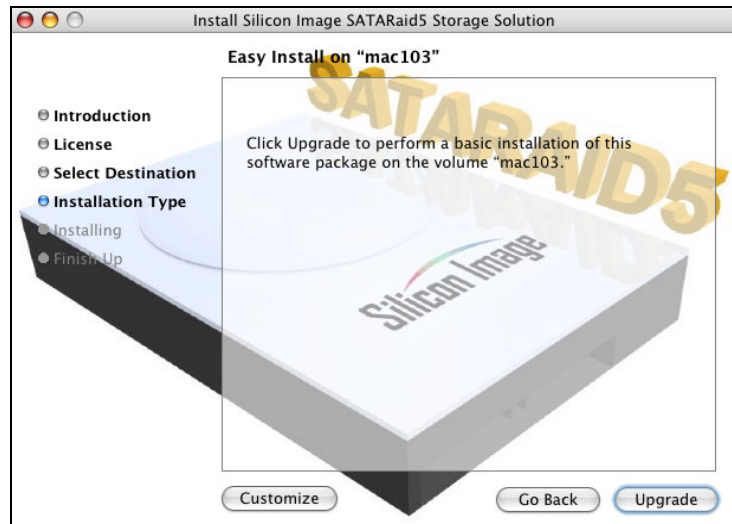

11. Accept the Easy Install defaults by clicking **Upgrade**. The following dialog appears:

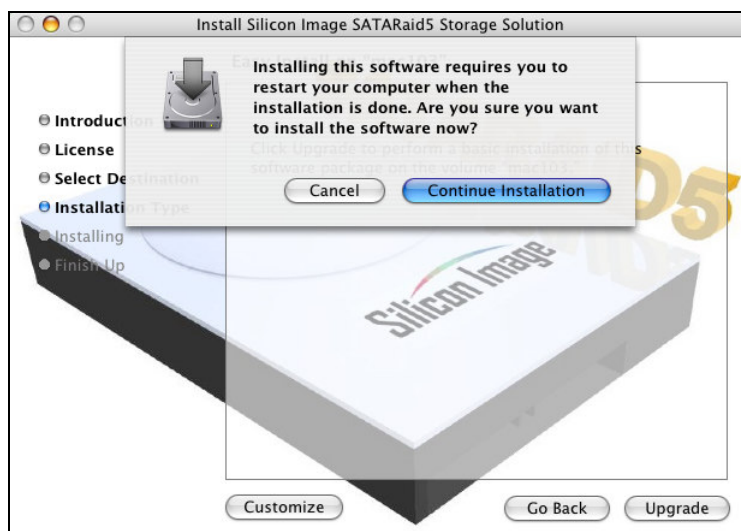

12. Click the **Continue Installation** button to proceed with the installation. The following dialog appears:



13. Enter the Administrative password for your system and click **OK**. The following dialog appears:



14. Click **Restart** to restart your system and complete the installation.

The SATARaid5 Manager is installed into the **Applications / Utilities / Silicon Image / SATARAID5** folder. You can launch it by double-clicking on the icon for the **SATARaid5.jar** file.

Refer to the SATARAID5 User's Guide for information about how to create RAID Groups through the SATARAID5 Manager and configure volumes using the MacOS *Disk Manager*.

Removing SATARAID5 Software Components

1. Open a terminal window
2. Change directory to `/Applications/Utilities/Silicon Image/SATARAID5/Scripts`
3. Type the command: `./uninstall.sh`

Upon completion of this script, the SATARAID5 software components will be removed from your system.