Diamond Rio500 Digital



BROWSE BUTTON AND MULTI WHEEL

Audio Player



QUICK INSTRUCTIONS

Move the OFF/HOLD/ON switch all the way to the right to turn on the Rio500.

Top of Player

 
Headphone OFF/HOLD/ON Switch

Use headphones or the cassette adaptor to listen to a recorded book. To use the adaptor - plug the cord into the headphone jack, insert the cassette into your car cassette deck, and press PLAY on the player.

Press PLAY/PAUSE to temporarily stop the player. Press the button again to resume play (play will resume from where you stopped). Press the STOP button when you finish listening. Move the OFF/ HOLD/ON switch to OFF to conserve battery power when you're done.



You can delete a bookmark by turning the MULTI wheel and highlighting the bookmark. Then hold the BOOKMARK button down for 2 seconds.



display the titles loaded on the player. Roll the MULTI wheel to highlight a title then press the MULTI wheel to select that title.

Press the BROWSE button once to display sections of a selected title. Roll the MULTI wheel to highlight a section (track).

Choose different selections by working with the BROWSE button

and the MULTI wheel. Pressing the BROWSE button twice will

Press the MULTI wheel to select that section. (Note: You must press the MULTI wheel within five seconds or your highlighted selection will disappear from the display.)

Pressing the BROWSE button three times allows you to see bookmarks. Press and hold the BOOKMARK button (see illustration on following page) for 2 seconds to create a bookmark. The word "Bookmark" will appear on the display followed by 1-16. You may set up to 16 bookmarks.


Press the BROWSE button three times to show the bookmark list in the display. Turn the MULTI wheel to highlight the bookmark. Press the MULTI wheel again to select the highlighted bookmark.

ADDITIONAL FEATURES

You can continuously repeat one section by pressing and releasing the BOOKMARK button at the beginning of that section. Then press and release the button again at the end of the section. The audio player will now continuously repeat that section. Press the BOOKMARK button again to cancel the repeat feature.

If you want to advance or return to another section (track) press the FF or REW button ONCE. If you press and HOLD the FF or REW buttons the section will advance several seconds or minutes (depending upon how long you press and hold the buttons).

The ON/OFF switch includes a HOLD setting. When the switch is placed in the HOLD position all other buttons are disabled. This is helpful if you want to listen to a recorded book while walking or jogging; so if a button is bumped you won't lose your settings.

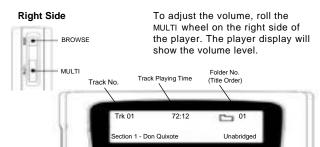


When you turn the player on the display shows the track number, track playing time, and folder number.

Each audiobook is comprised of several tracks (or sections). The track number will automatically advance in sequential order as you progress through the audiobook.

The track playing time shows the time it will take to listen to the track (or section). This information shows on the display.

Each title that is downloaded to the player is given a folder number. The folder number displayed refers to the title you are currently listening to.

 Top of Player



The Rio500 contains many features that make it suitable for playing and storing music. These features are found on the MULTI wheel and can complicate using the Rio for reading books. Program, EQ, Repeat, Random, and Backlight are all unnecessary for listening to books.

If the Rio display has a bold 1 or R at the top of the screen, the repeat or random feature has been engaged. When this feature is engaged the Rio will repeat a section or will select a section at random (not usually the way we read books). Go to the MULTI wheel to highlight the feature, and press the wheel in to turn off the feature.

* Some of the text in this brochure was borrowed with permission from the Kalamzoo Public Library